



**NECA 406-2014**

Standard for

# Installing and Maintaining Residential Generator Sets

AN AMERICAN NATIONAL STANDARD

Currently in preview, click buy full version



Published by  
National Electrical Contractors Association

**NECA 406-2014**

Standard for

# Installing and Maintaining Residential Generator Sets

**An American  
National Standard**



Published by  
National Electrical  
Contractors Association



<b>Revision History</b>	
NECA 406-2003 originally published	11/2003
NECA 406-2014 revised	09/2014

## **NOTICE OF COPYRIGHT**

*This document is copyrighted by NECA*

Reproduction of these documents either in hard copy or soft (including posting on the web) is prohibited without copyright permission. For copyright permission to reproduce portions of this document, please contact NECA Standards & Safety at (301) 215-4549, or send a fax to (301) 215-4500.

CP  
National Electrical Contractors Association  
3 Bethesda Metro Center, Suite 1100  
Bethesda, MD 20814  
(301) 657-3110

# Table of Contents

**Foreword**..... v

**1. Scope** ..... 1

1.1 Products and Applications Included ..... 1

1.2 Products and Applications Excluded ..... 1

1.3 Regulatory and Other Requirements ..... 1

**2. Definitions** ..... 3

**3. Safety** ..... 6

3.1 General ..... 6

3.2 Generator Operation ..... 6

3.3 Automatic Operation ..... 7

3.4 Rotating Machinery ..... 8

3.5 Operating Temperatures ..... 8

3.6 Electrical Shock Hazards ..... 8

3.7 Batteries ..... 9

3.8 Fuel Systems ..... 10

3.9 Exhaust Gases ..... 10

**4. Receiving, Handling, and Storage** ..... 12

4.1 Receiving ..... 12

4.2 Handling ..... 12

4.3 Storage ..... 13

**5. Installing the Generator and Associated Components** ..... 14

5.1 General ..... 14

5.2 Locating the Generator ..... 14

5.3 Automatic and Non-Automatic (Manual) Transfer Switches (ATSs and MTSs) ..... 15

5.4 Generator Disconnect Switch ..... 16

5.5 Utility or Service Disconnect Switch ..... 16

5.6 Generator Controller and Control /Annunciator Panel ..... 17

5.7 Wiring Methods, Overcurrent Protective Devices, and Grounding ..... 17

5.8 Final Installation Procedures ..... 21

5.9 Generator Coolant and Engine Oil ..... 22

5.10 Generator Starting Batteries ..... 22

**6. Energizing and Testing the Generator** ..... 23

6.1 Pre-Energizing Procedures ..... 23

6.2 Initial Starting of the Engine ..... 23

6.3	Initial Operational Testing.....	24
6.4	Setting the Generator Exerciser.....	25
<b>7.</b>	<b>Final Procedures .....</b>	<b>26</b>
7.1	Site Clean-Up.....	26
7.2	Punchlist and Acceptance .....	26
	<b>Annex A: Design Considerations.....</b>	<b>27</b>
A.1	General.....	27
A.2	Whole House Design (One Panelboard) .....	27
A.3	Essential Loads Design (Two Panelboards) .....	27
A.4	Generator Sizing.....	28
A.5	Sizing Generator Output Conductors and Overcurrent Protection Devices .....	33
A.6	Transfer Switch Design .....	34
A.7	Disconnect Switches.....	34
A.8	Essential Loads Panelboard.....	35
	<b>Annex B: Gaseous Fuel System Installation and Testing.....</b>	<b>36</b>
B.1	General.....	36
B.2	Installation.....	36
B.3	Testing.....	37
	<b>Annex C: Troubleshooting.....</b>	<b>39</b>
C.1	General.....	39
C.2	Generator Controller and Typical Fault Codes.....	39
	<b>Annex D: Service and Maintenance.....</b>	<b>45</b>
D.1	General.....	45
D.2	Engine Oil.....	45
D.3	Engine Coolant.....	46
D.4	Air Filters .....	48
D.5	Gaseous Fuel Systems.....	48
D.6	Daily Inspections or After 8 Hours of Operation .....	48
D.7	Monthly Inspections or After Every 100 Hours of Operation .....	49
D.8	Semi-Annual Inspections or After Every 250 Hours of Operation.....	49
D.9	Annual Service or After Every 500 Hours of Operation.....	50
D.10	Two-Year Service or After Every 1,000 Hours of Operation .....	50
D.11	Four-Year Service or After Every 1,000 Hours of Operation.....	50
D.12	After Every 1,500 Hours of Operation.....	50
D.13	Eight-Year Service or After Every 2,000 Hours of Operation.....	50
	<b>Annex E: Reference Standards .....</b>	<b>51</b>